

# DES-4121<sup>Q&As</sup>

PowerEdge Specialist Exam for Implementation Engineer

**Pass EMC DES-4121 Exam with 100% Guarantee**

Free Download Real Questions & Answers **PDF** and **VCE** file from:

<https://www.leads4pass.com/des-4121.html>

100% Passing Guarantee  
100% Money Back Assurance

Following Questions and Answers are all new published by EMC  
Official Exam Center

-  **Instant Download** After Purchase
-  **100% Money Back** Guarantee
-  **365 Days** Free Update
-  **800,000+** Satisfied Customers



## QUESTION 1

A technician is completing initial firmware updates on a server. One of the updates is a power supply update. During the update process, the server powers off. When the technician hits the power button, they do not see any response from the server.

What is the cause of this issue?

- A. Server lost power
- B. Control panel or power button failed
- C. Front power button is not operational during an update; the technician should use the rear power button.
- D. PSU firmware may now be corrupted

Correct Answer: D

---

## QUESTION 2

A server is being up as a VMware ESXi host. A technician needs to install the OS on an internal SD card. They install the SD card. However, during OS installation, the SD card is not visible.

What should the technician do to fix the issue?

- A. Enable the SD card in the BIOS Settings
- B. Format the SD card with an EXT3 partition before installation
- C. Move the SD card from slot 2 to slot 1
- D. Use Lifecycle Controller to install the SD card

Correct Answer: A

Reference

[https://www.google.com/url?](https://www.google.com/url?sa=t&andrc=j&andq=andescr=s&andsource=web&andcd=16&andcad=rja&andduact=8&andved=2ahUKEwjj2eCyj6HeAhWyxYUKHW4sBJYQFjAPegQIAhAC&andurl=https%3A%2F%2Fwww.sos.state.co.us%2Fpubs%2Felections%2FVotingSystems%2FDVS-DemocracySuite%2Fdocumentation%2FDell_Powerededge_R630_Owner_Manual.pdf&andusg=AOvVaw2slkf77AG7CKsMUwdpiwVa)

[sa=t&andrc=j&andq=andescr=s&andsource=web&andcd=16&andcad=rja&andduact=8&andved=2ahUKEwjj2eCyj6HeAhWyxYUKHW4](https://www.google.com/url?sa=t&andrc=j&andq=andescr=s&andsource=web&andcd=16&andcad=rja&andduact=8&andved=2ahUKEwjj2eCyj6HeAhWyxYUKHW4sBJYQFjAPegQIAhAC&andurl=https%3A%2F%2Fwww.sos.state.co.us%2Fpubs%2Felections%2FVotingSystems%2FDVS-DemocracySuite%2Fdocumentation%2FDell_Powerededge_R630_Owner_Manual.pdf&andusg=AOvVaw2slkf77AG7CKsMUwdpiwVa)

[sBJYQFjAPegQIAhAC&andurl=https%3A%2F%2Fwww.sos.state.co.us%2Fpubs%2Felections%](https://www.google.com/url?sa=t&andrc=j&andq=andescr=s&andsource=web&andcd=16&andcad=rja&andduact=8&andved=2ahUKEwjj2eCyj6HeAhWyxYUKHW4sBJYQFjAPegQIAhAC&andurl=https%3A%2F%2Fwww.sos.state.co.us%2Fpubs%2Felections%2FVotingSystems%2FDVS-DemocracySuite%2Fdocumentation%2FDell_Powerededge_R630_Owner_Manual.pdf&andusg=AOvVaw2slkf77AG7CKsMUwdpiwVa)

[2FVotingSystems%2FDVS-DemocracySuite%2Fdocumentation%](https://www.google.com/url?sa=t&andrc=j&andq=andescr=s&andsource=web&andcd=16&andcad=rja&andduact=8&andved=2ahUKEwjj2eCyj6HeAhWyxYUKHW4sBJYQFjAPegQIAhAC&andurl=https%3A%2F%2Fwww.sos.state.co.us%2Fpubs%2Felections%2FVotingSystems%2FDVS-DemocracySuite%2Fdocumentation%2FDell_Powerededge_R630_Owner_Manual.pdf&andusg=AOvVaw2slkf77AG7CKsMUwdpiwVa)

[2FDell\\_Powerededge\\_R630\\_Owner\\_Manual.pdf&andusg=AOvVaw2slkf77AG7CKsMUwdpiwVa](https://www.google.com/url?sa=t&andrc=j&andq=andescr=s&andsource=web&andcd=16&andcad=rja&andduact=8&andved=2ahUKEwjj2eCyj6HeAhWyxYUKHW4sBJYQFjAPegQIAhAC&andurl=https%3A%2F%2Fwww.sos.state.co.us%2Fpubs%2Felections%2FVotingSystems%2FDVS-DemocracySuite%2Fdocumentation%2FDell_Powerededge_R630_Owner_Manual.pdf&andusg=AOvVaw2slkf77AG7CKsMUwdpiwVa)

---

## QUESTION 3

A technician is creating a virtual disk in the DRAC (2x 4 TB NL-SAS in RAID 1) to install Windows 2016. They manually

boot to the OS installation media without using the Lifecycle Controller OS Deployment wizard. Only the first 2048 GB on the virtual disk can be partitioned.

How should the technician obtain access to the remaining 2 TB (approximately) of storage?

- A. Delete the 4 TB virtual disk and create a virtual (boot) disk no longer than 2048 GB.
- B. Upgrade to a newer version of the operating system.
- C. Use the lifecycle Controller's OS Deployment Wizard to deploy the OS on this server.
- D. Use F2 to go into the BIOS, change the BIOS boot mode to UEFI, and try again.

Correct Answer: C

---

#### QUESTION 4

A technician needs to install the OS on a server remotely using iDRAC. What is the minimum iDRAC license required to perform this task?

- A. Express
- B. Enterprise
- C. Basic
- D. Baseboard Management Controller

Correct Answer: B

Reference <https://community.spiceworks.com/topic/514389-dell-idrac-licensing>

---

#### QUESTION 5

A technician needs to repurpose a server. The server has dual processors with 18 cores each. The OS only sees 24 threads in total.

Which setting should the technician change in Processor Settings in the System BIOS?

- A. Number of Cores per Processor
- B. System profile
- C. Virtualization Technology
- D. Hyperthreading

Correct Answer: A

Reference <https://www.dell.com/community/PowerEdge-Hardware-General/Disable-cores-on-the-bioslevel/td-p/4592763>

---

[DES-4121 PDF Dumps](#)

[DES-4121 Practice Test](#)

[DES-4121 Study Guide](#)