

## E20-594<sup>Q&As</sup>

Backup and Recovery - Avamar Specialist Exam for Implementation Engineers

**Pass EMC E20-594 Exam with 100% Guarantee**

Free Download Real Questions & Answers **PDF** and **VCE** file from:

<https://www.leads4pass.com/e20-594.html>

100% Passing Guarantee  
100% Money Back Assurance

Following Questions and Answers are all new published by EMC  
Official Exam Center

- ⚙️ **Instant Download** After Purchase
- ⚙️ **100% Money Back** Guarantee
- ⚙️ **365 Days** Free Update
- ⚙️ **800,000+** Satisfied Customers



## QUESTION 1

What is a supported configuration in a Dell EMC Avamar Gen4T multi-node server?

- A. One utility node, one ADS internal switch, four storage nodes M1200, and two spare nodes
- B. One utility node, two ADS internal switches, and three storage nodes S2400
- C. One utility node, two ADS internal switches, five storage nodes M600, and one spare node
- D. One utility node, two ADS internal switches, and 17 storage nodes M600.

Correct Answer: B

Reference: <https://suisse.emc.com/collateral/TechnicalDocument/docu70650.pdf>

---

## QUESTION 2

By default, which port is used when communicating with the EMC Avamar server using the Avamar Administrative GUI?

- A. 5555
- B. 7778
- C. 8443
- D. 29000

Correct Answer: B

---

## QUESTION 3

During an EMC Avamar server garbage collect maintenance activity, which backups are candidates for collection?

- A. Partial backups older than seven days
- B. Backups that have been retired
- C. Backups performed manually
- D. Root-to-root replicated backups

Correct Answer: A

---

## QUESTION 4

An EMC Avamar customer wants to run garbage collection outside the blackout window. What may prevent the garbage collection job from starting?

- A. HFS check is running.
- B. Restores are running.
- C. System is running in degraded mode.
- D. There is no garbage to collect.

Correct Answer: A

---

## QUESTION 5

How many LUNs should be configured on a single-node EMC Avamar system with 2 TB of licensed capacity?

- A. 1
- B. 2
- C. 3
- D. 4

Correct Answer: C

---

## QUESTION 6

Which utility is used to shut down and restart Dell EMC Avamar services for a multi-node server?

- A. restart.dpn
- B. start.nodes
- C. avaint
- D. dpnctl

Correct Answer: D

Reference: <https://community.emc.com/docs/DOC-17920>

---

## QUESTION 7

When attaching directly to the management port of an EMC Avamar Data Store, which is the recommended IP address to assign to your laptop?

- A. 10.99.99.99
- B. 10.99.99.5
- C. 10.10.99.99

D. 10.10.99.5

Correct Answer: A

---

## QUESTION 8

The average daily data added to an AVE is less than 4 GB per day in a file server-only environment and less than 10 GB in a mixed environment.

What is the minimum EMC AVE environment that can support these requirements?

A. 0.5 TB

B. 1.0 TB

C. 2.0 TB

D. 3.3 TB

Correct Answer: B

---

## QUESTION 9

Following a successful full root-to-root replication from one Dell EMC Avamar server to the other, what is the recommended method to switch the backup clients to the new Avamar server?

A. Update the DNS server to redirect the old source server hostname to the new backup server's IP address

B. Move the clients from the old Avamar to the new one using Avamar Client Manager

C. Reactivate the clients with the new Avamar server

D. Run a batch file to activate the client to both Avamar servers

Correct Answer: A

---

## QUESTION 10

What is the minimum seek time required to pass the benchmark test of a single-node, 3.3 TB EMC Avamar?

A. 325 seeks/sec

B. 450 seeks/sec

C. 500 seeks/sec

D. 550 seeks/sec

Correct Answer: C

---

**QUESTION 11**

Which node types can be defined with the EMC Avamar `dpnnetutil` command?

- A. Storage, utility, access, accelerator, and spare
- B. Storage, utility, access, and spare only
- C. Storage, accelerator, and spare only
- D. Storage, access, and spare only

Correct Answer: A

---

**QUESTION 12**

What is the access mode of the server during an EMC Avamar checkpoint maintenance activity?

- A. Read-only during checkpoint creation; read-write for the remainder of the activity
- B. Read-only throughout the activity
- C. Access is disabled throughout the activity
- D. Access is disabled during checkpoint creation; read-only for the remainder of the activity

Correct Answer: A

---

**QUESTION 13**

What is the correct sequence of steps to install ADMe?

Select and Place:

Answer Area

- Create/atoadmin directory on Avamar server
- Clients registered to Avamar server under/ato domain
- Install Korn Shell
- Transfer and extract the ADMe tar file

- Step 1
- Step 2
- Step 3
- Step 4

Correct Answer:

- 
- 
- 
- 

Answer Area

- Install Korn Shell
- Create/atoadmin directory on Avamar server
- Transfer and extract the ADMe tar file
- Clients registered to Avamar server under/ato domain

### QUESTION 14

In the Dell EMC Avamar Data Store internal switch, the utility node is always connected on which port?

- A. ADS internal switch port 1
- B. ADS internal switch port 12
- C. ADS internal switch port 22
- D. ADS internal switch port 24

Correct Answer: D

---

## QUESTION 15

What is the physical label of the management port on an EMC Avamar Data Store node?

- A. Gb0
- B. Gb1
- C. Gb2
- D. Gb3

Correct Answer: C

[E20-594 PDF Dumps](#)

[E20-594 VCE Dumps](#)

[E20-594 Braindumps](#)