

HP2-T23^{Q&As}

Supporting Industry Standard Server Solutions

Pass HP HP2-T23 Exam with 100% Guarantee

Free Download Real Questions & Answers **PDF** and **VCE** file from:

<https://www.leads4pass.com/hp2-t23.html>

100% Passing Guarantee
100% Money Back Assurance

Following Questions and Answers are all new published by HP Official Exam Center

-  **Instant Download** After Purchase
-  **100% Money Back** Guarantee
-  **365 Days** Free Update
-  **800,000+** Satisfied Customers



QUESTION 1

How can you verify that the system and option ROMs in a ProLiant server are the latest version?

- A. Review the information in the Insight Display
- B. Launch the Intelligent Management Center and view updates.
- C. Restart the server and review ORCA
- D. Restart the server and review POST.

Correct Answer: A

QUESTION 2

Which tool can you use to verify that SNMP events appear in HP SIM from a server blade running Windows 2008?

- A. Onboard Administrator
- B. System Management Homepage
- C. HP SNMP Agent
- D. Integrated Lights-Out

Correct Answer: B

QUESTION 3

A customer is using a c3000 enclosure and wants to install a redundant Onboard Administrator (OA). What should the customer change in the existing enclosure to support the additional OA?

- A. OA rail kit
- B. power supplies
- C. OA firmware
- D. enclosure midplane

Correct Answer: C

QUESTION 4

How wide must the a data center door be to allow an HP MCS G2 rack to be brought into the data center?

- A. 45 cm (1.5 feet)

- B. 60 cm (2 feet)
- C. 80 cm (2.5 feet)
- D. 110 cm (3.6 feet)

Correct Answer: D

QUESTION 5

A customer has a ProLiant DL380p Gen8 server with one CPU and four 16 GB RDIMMs with 24 total DIMM slots. The customer wants to increase the memory in this server.

Which memory option is valid?

- A. Remove the existing memory and populate all memory slots with UDIMM memory.
- B. Populate the remaining 20 memory slots with additional UDIMM memory.
- C. Populate another eight memory slots with additional RDIMM memory.
- D. Populate the remaining 20 memory slots with additional RDIMM memory.

Correct Answer: C

QUESTION 6

How do you boot into Intelligent Provisioning on a ProLiant Gen8 server?

- A. by pressing the F9 button during POST
- B. pressing the F10 button during POST
- C. through a Scripting Toolkit server configuration script
- D. through the Array Configuration Utility (ACU) in offline mode

Correct Answer: B

QUESTION 7

Which RAID level allows the data to be striped across multiple RAIDs? (Select two.)

- A. RAID 0
- B. RAID 1
- C. RAID 5
- D. RAID 50

E. RAID 60

Correct Answer: AD

QUESTION 8

Which statements are correct about the HP Customer Self Repair (CSR) program?

- A. A travel and labor charge applies when customers request HP to replace parts.
- B. A travel and labor charge does not apply when customers decline to replace a mandatory CSR part.
- C. A travel and labor charge does not apply when customers decline to replace an optional CSR part.
- D. A travel and labor charge applies when customers decline to replace an optional CSR part.

Correct Answer: A

QUESTION 9

What is a DDR3 memory population rule to follow for a ProLiant Gen8 server?

- A. UDIMMs, RDIMMs, and LRDIMMs can be mixed in the same bank.
- B. DIMMs of different voltages or speeds cannot be mixed in the same bank.
- C. If only one processor is installed in a two-processor system, only half of the DIMM slots are available.
- D. The server automatically balances capacity of quad-rank RDIMMs across all memory channels.

Correct Answer: A

QUESTION 10

You need to check the firmware revision of the disk drives installed in a ProLiant DL380Gen8 server. What can you use to check the revision while the server is online?

- A. Option ROM Configuration for Arrays (ORCA)
- B. HP Insight Diagnostics
- C. Integrated Management Log
- D. Array Configuration Utility (ACU)

Correct Answer: B

QUESTION 11

Which steps should you perform to save a Virtual Connect configuration?

- A. From CLI show all > cfg.txt
- B. Enclosure setting configuration scripts show, config save
- C. Enclosure setting configuration scripts inventory
- D. VCM Tools Backup/Restore Domain Configuration

Correct Answer: D

QUESTION 12

An engineer added a second Onboard Administrator (OA) module to a c7000 enclosure so the OAs are redundant. The modules, however, are not at the same firmware level. What is an easy way to bring them to the same firmware version?

- A. Use HP SUM to update both OAs simultaneously
- B. Use the Synchronize Firmware feature in either OA
- C. Use HP SUM Offline to update the standby OA, restart it, and repeat the procedure on the remaining OA.
- D. Use HP Systems Insight Manager (HP SIM) to push the updates to each OA.

Correct Answer: C

QUESTION 13

What is a result of selecting the Allow Non-Bundled Versions in HP SUM?

- A. Other non-bundled products can be added to the bundle.
- B. All available firmware will be overwritten.
- C. All products will be updated, including other manufacturers' firmware, and updates will be installed with the bundle.
- D. Old and new firmware files can be added and be installed with the bundle.

Correct Answer: D

QUESTION 14

Which statements are correct about HP Systems Insight Manager (HP SIM) 7.0 Agentless Management? (Select two.)

- A. HP SIM communicates with the CPU and collects essential data for the operating system.
- B. Agentless Management is provided by the CPU.
- C. HP SIM communicates with the iLO Management Engine to collect hardware data.

D. The Agentless Management Service runs on the host to provide software information directly to the iLO Management Engine.

Correct Answer: CD

QUESTION 15

An engineer is installing an HP R7000 UPS and an Extended Runtime Module (ERM) in an existing HP 10642 G2 rack. This rack contains 10 ProLiant DL380e Gen8 servers mounted from 1U upward.

How should the engineer perform this installation?

- A. Mount the R7000 UPS at 10U in the 10642 G2 rack with the ERM on top of the R7000 UPS.
- B. Remove the lowest ProLiant DL380e Gen8 servers and mount the R7000 and the ERM at the lowest position in the rack. Mount the removed ProLiant DL380e Gen8 servers at a higher position in the 10642 G2 rack.
- C. Mount the R7000 at the highest position possible in the 10642 G2 rack with the ERM just below the UPS.
- D. Remove the two lowest mounted ProLiant DL380e Gen8 servers and mount the R7000 at the bottom of the 10642 G2 rack. Mount the two removed ProLiant DL380e Gen8 servers at the top of the 10642 G2 rack. Mount the ERM above the remaining original mounted ProLiant DL380e Gen8 servers.

Correct Answer: B

[HP2-T23 PDF Dumps](#)

[HP2-T23 VCE Dumps](#)

[HP2-T23 Practice Test](#)